


How to use your MZ-4 Page Controller

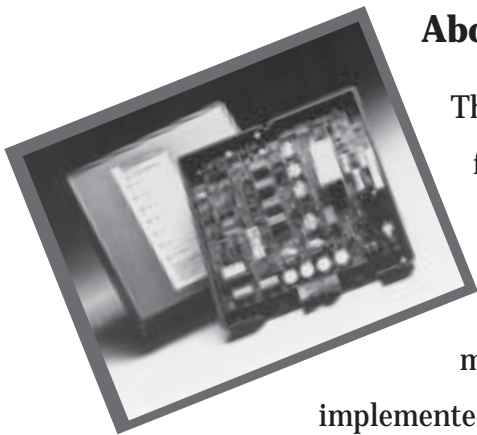

About the MZ-4 Page Controller

The heart of your paging system is the MZ-4 Page Controller from Gordon Kapes, Inc. With the MZ-4 you get sophisticated features that are simple to access.

Depending on your needs, features such as background music, pre-page alert tone, and night chime have been implemented. The chart in this document shows how these custom features have been selected for your system.

Something unique to the MZ-4 is the ability to control an auxiliary relay switch. By simply accessing the MZ-4 and dialing a code you can control a preselected device. The Auxiliary Relay operation section will tell you how your system has been installed and how to use it.

How to use your MZ-4 Page Controller

How your paging system has been programmed

ZONE	LOCATION	BACKGROUND MUSIC	ALERT TONE	NIGHT CHIME
1				
2				
3				
4				

How to use your paging system

To access the paging system:

You'll hear a dial tone coming from the MZ-4. Now dial the desired zone number on your push-button telephone. If a zone has been programmed to give a pre-page alert, you'll hear a tone. Wait until the tone has ended to begin your page. If the zone hasn't been set to receive a pre-page alert, you'll hear nothing and can begin your page immediately.

When you complete your page, dial **#**. You'll hear a dial tone again. To do another page, just dial the desired zone. If you don't want to do another page, hang up.

To page more than one zone at once, dial ***** followed by the zones to be paged and then ***** again (e.g., to page zones 1 and 4 dial *14*). After the page, dial **#**. You'll hear a dial tone. Hang up or dial the next zone(s) you want.

To page all four zones at once, dial **0**. Begin the page. After the page dial **#**. You'll hear a dial tone. Hang up.

If you misdial, don't worry, the MZ-4 will return you to a dial tone. Simply redial the correct zone number.

Auxiliary Relay operation

A special switch called the Auxiliary Relay can be controlled by accessing the MZ-4, dialing *****, the appropriate number code, followed by ***** again.

Your Auxiliary Relay has been set up to:

and can be turned on/off by dialing as follows:

5000	Turns it OFF
5001	Turns it ON
5002	Turns it on for 1 second
5003	Turns it on for 2 seconds
5004	Turns it on for 5 seconds
5005	Turns it on for 10 seconds
5006	Turns it on for 30 seconds
5007	Turns it on for 1 minute
5008	Turns it on for 2 minutes
5009	Turns it on for 5 minutes

A tone will sound to tell you that your command was received. Then you'll hear a dial tone. Hang up. If the Auxiliary Relay is on and you want to turn it off before the designated time, dial *5000*.