

Technical Practice

Issue 1, March, 1992

BP-1A POWER FAILURE TRANSFER UNIT

Contents

Section 1	General Description
Section 2	Applications
Section 3	Installation
Section 4	Testing and Operation
Section 5	Circuit Description
Section 6	Specifications
Section 7	Incorrect Operation
Section 8	Repair and Replacement
Section 9	United States FCC Notes
Section 10	Canadian DOC Notes
Section 11	BP-1A Technical Notes



1. General Description

1.1 PRACTICE In the event that this practice is reissued, the reason for the reissue will be stated in this paragraph.

1.2 REVISED UNIT This technical practice covers the BP-1A Power Failure Transfer Unit, a revised version of the BP-1-24 and BP-1-48 units. The BP-1A offers significant improvements, while maintaining compatibility with the earlier units. A detailed description of the differences between the BP-1A and BP-1 is covering in Section 11—BP-1A Technical Notes of this technical practice.

1.3 PRODUCT OVERVIEW The BP-1A Power Failure Transfer Unit is designed to connect two-wire Central Office (CO) loop start trunk lines to selected station telephones in the event of a power failure or telecommunications system malfunction. In the normal, non-transfer mode of operation, the BP-1A connects the CO trunk lines to trunk ports on the associated PBX system; PBX extension ports are connected to the station telephones.

1.4 FEATURES BP-1A features include eight circuits of power failure transfer (PFT), LED status indicators, manual transfer switch, an auxiliary relay contact, return to normal mode delay timer, and universal powering. Also included are provisions for a normally open, normally closed, or logic level signal to

control the operating mode.

1.5 POWER REQUIREMENTS The BP-1A can be powered with 24Vac, -24Vdc, or -48Vdc. There are no switches to set or straps to cut. The BP-1A automatically adjusts for the power that is connected.

1.6 DESCRIPTION The BP-1A consists of a precision fabricated printed circuit board and an injection molded housing consisting of a base and detachable cover. The thermoplastic material used for the housing conforms to industry-recognized flame retardant standards. The BP-1A measures 8.75 inches (22.2cm) square, 3.25 inches (8.3cm) deep, and weighs approximately two pounds (0.9kg). It wall mounts with four screws.

1.7 FCC REGISTRATION The FCC Registration Number is BVV8VH-60403-PX-N. Ringer Equivalence is 0.1B.

2. Applications

2.1 PRIMARY APPLICATION The primary application for the BP-1A is to provide PFT capability for up to eight loop start trunk lines associated with a PBX telephone system.

2.2 TRANSFER CONTROL LINES The BP-1A contains two transfer control lines: contact input and logic input. These inputs allow a PBX system malfunction alarm signal to place

the BP-1A in the transfer mode. With this capability, the BP-1A will work correctly with virtually every PBX. The contact input allows connection of a normally open (not shorted) or normally closed (shorted) contact. The logic input allows connection of a logic level signal. This input is useful as some PBX systems provide an operating status signal in the form of a logic signal—logic high for normal operation, logic low when transfer is requested.

2.3 RETURN TO NORMAL MODE DELAY TIMER A unique circuit provides a time delay between when power is restored (or a transfer control line returns to its normal state) and when the eight power failure transfer circuits return to the normal, non-PFT mode. The timer is adjustable from 0 to 15 minutes in one-minute increments. The timer ensures that sufficient time is allowed for a PBX to completely reset prior to the BP-1A leaving the transfer mode.

2.4 AUXILIARY RELAY CONTACT An isolated relay contact is available for installer-selected applications. Auxiliary Relay Contact NO1 is a normally open (not shorted) contact that closes (shorts) when the unit goes into the transfer mode.

2.5 NIGHT TRANSFER DEVICE The BP-1A can be used as a night transfer device. After business hours, CO trunk lines can be connected to station telephones, bypassing the normal PBX connections. This can be implemented easily by connecting the BP-1A's contact input to a switch on an operator's console.

2.6 USING MULTIPLE BP-1As Multiple BP-1As can be connected to provide more than eight circuits of PFT. The transfer control lines are specifically configured to allow bridging (connecting in parallel). A virtually unlimited number of BP-1As can be installed together when the contact input is used. Up to six units can be connected together when the logic input is used.

3. Installation

3.1 WORDS OF CAUTION As with any product, installing the BP-1A requires a safety-first approach.

Warning: Never install telephone wiring during a lightning storm. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations. Never touch non-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. Use caution when installing or modifying telephone lines.

3.2 CHECKING FOR DAMAGE The BP-1A should be inspected for damage immediately upon receipt. A claim should be filed with the shipper if damage is found. A replacement should be ordered if necessary.

3.3 INSTALLATION KIT Included in each BP-1A shipping carton is an installation kit. Each kit contains four #8 pan head screws, two nylon cable ties, and a strip of "Power Failure Transfer Telephone" labels.

3.4 THE COVER The cover is secured via two clamp screws located on the top and bottom of the cover. Remove the cover at this time.

3.5 MOUNTING The BP-1A wall mounts using four #8 screws appropriate for the wall material. Four #8 pan head screws are contained in the installation kit. Use these if suitable.

3.6 BP-1A CONNECTIONS All connections to the BP-1A are made via two 25-pair plugs P1 and P2, and a 3-position screw terminal strip TS1. The installer must provide two 25-pair

cable mounted connectors to mate with P1 and P2. Figure 2, located at the end of this practice, gives detailed connection information. Refer to this figure when reading the installation procedures.

3.7 USING THE TERMINAL STRIP The 3-position screw terminal strip provides an alternate connection point for AC or DC power. Two of the three terminals connect in parallel with their respective terminals on plug P1; the first terminal is not used. In some installations, it is convenient to make power connections using terminal strip TS1.

3.8 INSTALLING AND TERMINATING THE 25-PAIR CONNECTORS Install the two 25-pair cable mounted connectors into plugs P1 and P2. Secure them using the fastener strap that is attached to the plug. Terminate the cables (e.g., in a "66" type block).

3.9 CONNECTING POWER The BP-1A requires an external source of power. This can be nominal 24Vac, -24Vdc, or -48Vdc. The BP-1A automatically adjusts to match the power that is connected. The power source can be connected to either the Violet/Slate and Violet/Brown pairs of plug P1 or to terminals 2 and 3 of the terminal strip. It is the installer's option where to connect power.

Powering with 24Vac: Connect one lead of the 24Vac to the Violet/Brown pair of P1, or terminal 2 of TS1. Connect the other 24Vac lead to the Violet/Slate pair of P1, or terminal 3 of TS1. When using the BP-1A with 24Vac, it is important that both sides of the 24Vac be floating (isolated) from earth ground. The 24Vac power transformer must be a Class 2 type, 10VA minimum. Failure to provide this condition can result in incorrect BP-1A operation.

Powering with -24Vdc: Connect power supply ground to the Violet/Brown pair of P1, or terminal 2 of TS1. Connect -24Vdc to the Violet/Slate pair of P1, or terminal 3 of TS1.

Powering with -48Vdc: Connect power supply ground to the Violet/Slate pair of P1, or terminal 2 of TS1. Connect -48Vdc to the Violet/Slate pair of P1, or terminal 3 of TS1.

3.10 TRUNK AND STATION CONNECTIONS Referring to Figure 2 located at the end of this practice, cross-connect the pairs with the CO trunks, PBX system trunk and extension ports, and station telephones. Four cable pairs are cross-connected for each of the eight PFT circuits.

3.11 USING THE TRANSFER CONTROL LINES The BP-1A has two transfer control lines: contact input and logic input. These inputs are designed to be connected to operating status signals on an associated PBX system. The PBX documentation may refer to these points as "Bypass Enable," "Transfer Request," "System Status," etc. PBX status signals compatible with the BP-1A's contact input can be in the form of an isolated relay contact or a contact that closes or opens in reference to ground. The logic input is a different breed. It wants to see logic current, such as from a 5Vdc digital circuit, when the PBX system is operating correctly.

Using the transfer control lines is really quite easy. Start by determining what type of contact or logic signal the PBX provides, and set the BP-1A mode switch to the appropriate position. Then connect the signal to the appropriate transfer control line.

3.12 THE MODE SWITCH The BP-1A contains a 3-position slide switch, labeled MODE, which is used to set which transfer control line is active and how the BP-1A will respond.

The three positions are labeled NO, NC, and LOGIC.

Note: If a signal is not going to be connected to the transfer control lines, set the mode switch to the NO position. Setting the mode switch to any other position without connecting the appropriate input signal will cause the BP-1A to stay "locked" in the transfer mode.

NO Mode: Setting the mode switch to the NO position places the BP-1A in the normally open contact mode of operation. In this mode, the contact input is connected to a normally open (not shorted) contact that closes (shorts) when transfer is requested. The BP-1A can return to the normal, non-transfer mode once the contact opens. This type of contact is provided by many PBX systems, including the ROLM CBX and 9751, Siemens Saturn, and Northern Telecom SL-1 series. In this mode, the logic input is not used. A signal connected to the logic input is not recognized.

NC Mode: Setting the mode switch to the NC position places the BP-1A in the normally closed contact mode of operation. In this mode, the contact input is connected to a normally closed (shorted) contact that opens when transfer is requested. The BP-1A can return to the normal mode once the contact again closes. In this mode, the logic input is not used. A signal connected to the logic input is not recognized.

Logic Mode: Setting the mode switch to the LOGIC position gives the logic input its moment of glory. In this mode, the logic input is connected to a logic signal that is logic high for normal PBX system operation. This logic signal must change to a logic low when transfer is requested. The BP-1A can return to the normal mode when a logic high is again present. In this mode, the contact input is not used. A signal connected to the contact input is not recognized.

3.13 CONNECTING TO THE TRANSFER CONTROL LINES

Using the PBX documentation, identify the status signal provided by the PBX. Most PBX systems provide some sort of signal for use in controlling external equipment such as PFT units. In the previous paragraph you should have selected the BP-1A operating mode and set the mode switch to the desired setting. Follow the connection information for the desired mode of operation: NO, NC, or LOGIC.

NO Mode: If you have selected the normally open mode of operation, follow this section when connecting the BP-1A to the PBX.

Isolated Contact: If your PBX provides an isolated, normally open (not shorted) contact, connect its leads to the Violet/Green pair of P1. An isolated contact provides two leads, neither of which is connected to ground.

Closure to Ground: If your PBX provides a normally open (not shorted) contact that closes (shorts) in reference to PBX ground, connect the contact to the Violet/Green wire of P1. PBX ground must be connected to the Green/Violet wire of P1.

NC Mode: If you have selected the normally closed mode of operation, follow this section when connecting the BP-1A to the PBX.

Isolated Contact: If your PBX provides an isolated, normally closed (shorted) contact, connect its leads to the Violet/Green pair of P1. An isolated contact provides two leads, neither of which is connected to ground.

Closure to Ground: If your PBX provides a normally closed (shorted) contact that is closed in reference to PBX ground, connect the contact to the Violet/Green wire of P1. PBX ground must be connected to the Green/Violet wire of P1.

Logic Mode: If you have selected the logic mode of operation, follow this paragraph when connecting the BP-1A to the PBX. Connect the positive lead of the logic signal to the Violet/Blue wire of P1. Connect the common, ground, or negative lead of the logic signal to the Blue/Violet wire of P1.

3.14 RETURN TO NORMAL MODE DELAY TIMER The BP-1A incorporates a delay timer circuit to allow a PBX to completely reset prior to the PFT trunks being returned to the normal, non-transfer mode. The timer is activated upon the transfer control input (contact or logic) going from the transfer state to the normal state or when power is applied to the unit after an interruption. Only after the timer has gone through a complete cycle can the PFT circuits return to the normal mode. The delay timer is adjustable from 0 to 15 minutes in one-minute increments. Four positions of a DIP switch are used to set the timer interval. Refer to Figure 1 for details on setting the time interval.

Figure 1 Time Interval Settings

Switch	Function
1	ON adds 1 minute
2	ON adds 2 minutes
3	ON adds 4 minutes
4	ON adds 8 minutes

All switches OFF disables the delay timer function.

3.15 AUXILIARY RELAY CONTACT The BP-1A provides an isolated relay contact for use in installer-selected applications. Auxiliary relay contact NO1 closes (shorts) any time the unit is in the transfer mode.

3.16 MULTIPLE UNITS Additional BP-1A units easily can be connected to provide PFT for more than eight trunks. The following paragraphs detail the various installation scenarios.

NO or NC Modes: The contact input connections of a virtually unlimited number of BP-1A units can be bridged together (connected in parallel). Connect the first BP-1A to the PBX according to the instructions in Section 3.13 for Normally Open or Normally Closed modes of operation. Connect P1 Violet/Green pair of the first unit to P1 Violet/Green pairs on the additional BP-1As. Be certain that the polarity of the connections is maintained.

Logic Mode: The logic input connections of up to six BP-1As can be bridged together (connected in parallel). Each logic input requires a minimum of 1mA of current for correct operation. A standard logic output source can provide at least 10mA. This is plenty of current to conservatively drive six BP-1As. Connect the logic input of the first BP-1A to the PBX according to the instructions in Section 3.13 for logic mode. Connect P1 Violet/Blue pair of the first unit to P1 Violet/Blue pairs of the additional BP-1As. Be sure that the polarity of the connections is maintained.

3.17 SECURING THE CONNECTING WIRES Use the cable ties provided in the installation kit to secure the 25-pair cables,

along with any wires connected to the terminal strip, to the mounting points molded into the BP-1A's base.

3.18 POWER FAILURE TRANSFER TELEPHONE LABELS

Included in the installation kit are adhesive-backed labels. These labels are provided to identify the station telephones that are connected to the BP-1A's PFT circuits. Apply them to the station telephones at this time.

4. Testing and Operation

4.1 INSTALLATION REVIEW At this stage, the CO trunk lines, PBX trunk and station ports, and station telephones should be cross-connected with the BP-1A. Power, transfer control line, and relay contact connections should be made. The mode and delay timer switches should be set.

4.2 STATUS LEDs The BP-1A contains two LED indicator lights. They are designed to provide assistance during installation, troubleshooting, and maintenance. The power LED is lit any time power is supplied to the unit. The transfer LED has three states: off, lit steadily, and flashing. The transfer LED lights steadily any time the unit is in the transfer mode while power is present. The transfer LED flashes when the contact or logic transfer control input has gone from the transfer to the normal state or power has returned to the unit, and the timer is actively delaying the unit from returning the normal mode. Once the timing cycle has completed, the LED stops lighting.

4.3 EXPLANATION OF OPERATING MODES The BP-1A operates in two modes: normal and transfer.

Normal Mode: Normal mode operation commences when power is applied, the selected transfer control line is in its non-transfer state, the manual transfer switch is not activated and, if used, the delay timer has completed its time interval. In the normal mode, the power LED is lit.

Transfer Mode: Transfer mode is entered for any of three reasons: loss of power to the BP-1A, a transfer request via the contact input or logic input, or activation of the manual transfer switch. When the BP-1A loses incoming power, the transfer mode is entered and neither of the LEDs are lit. When the transfer mode is entered due to a request via the contact input or logic input, or by pressing the manual transfer switch, the transfer LED will light and the power LED will remain lit. The transfer LED helps to differentiate a transfer caused by the loss of incoming power and a transfer caused by activating one of the transfer control lines or pressing the manual transfer switch.

4.4 TESTING THE BP-1A IN THE NORMALLY OPEN MODE In this section, we will test the BP-1A in an installation where the mode switch has been set to the NO position. This would be the case where the PBX provides a normally open (not shorted) contact that closes when transfer is requested.

Initial Operation: At this stage, the BP-1A should be in the normal mode, with only the power LED lit. If the transfer LED is lit or flashing, determine whether or not this is a problem. There are three reasons for the transfer mode being enabled. The first reason is legitimate: the contact input is closed (shorted), giving a command to transfer. This could be the case where a new PBX has not yet been brought up to its operating state and it is legitimately giving a command to transfer. The second reason is that the timer is active and the time interval has not completed. The transfer LED will be

flashing when the timer is active. Reset the timer by pressing the manual transfer switch twice. The third reason is that the manual transfer switch is activated. Press it once to change its on/off state. After performing a review and making any required changes, the unit should be in the normal mode. Only the power LED should be lit.

Testing Transfer Operation: Momentarily disconnect the power source from the BP-1A. The power LED should go out, indicating that the unit is in the transfer mode. Again apply power. The power LED should light. If the delay timer has been selected, the transfer LED will flash until the delay time has completed. Short the contact input at the source of the contact, e.g. at the PBX. The transfer LED should light. The power LED will remain lit when the transfer LED is lit. Remove the short and one of two things will happen. If the delay timer is set for 0 seconds, the transfer LED should immediately go out. If the timer is set to anything but 0 seconds, removing the short will start the timer and the transfer LED will flash until the timer has completed its cycle. If desired, the timer can be reset mid-cycle by pressing the manual transfer switch twice. This eliminates the need to wait for the entire cycle to finish.

4.5 TESTING THE BP-1A IN THE NORMALLY CLOSED MODE In this section, we will test the BP-1A in an installation where the mode switch has been set to the NC position. This would be the case when the PBX provides a normally closed (shorted) contact that opens when transfer is requested.

Initial Operation: At this stage, the BP-1A should be in the normal mode, with only the power LED lit. If the transfer LED is lit or flashing, determine whether or not this is a problem. There are three reasons for the transfer mode being enabled. The first reason is legitimate: the contact input is open (not shorted), giving a command to transfer. This could be the case where a new PBX has not yet been brought up to its operating state and it is legitimately giving a command to transfer. The second reason is that the timer is active and the time interval has not completed. The transfer LED will be flashing when the timer is active. Reset the timer by pressing the manual transfer switch twice. The third reason is that the manual transfer switch is activated. Press it once to change its on/off state. After performing a review and making any required changes, the unit should be in the normal mode. Only the power LED should be lit.

Testing Transfer Operation: Momentarily disconnect the power source from the BP-1A. The power LED should go out, indicating that the unit is in the transfer mode. Again apply power. The power LED should light. If the delay timer has been selected, the transfer LED will flash until the delay time has completed. Remove the short on the contact input at the source of the contact, e.g. at the PBX. The transfer LED should light. The power LED will remain lit when the transfer LED is lit. Reconnect the short and one of two things will happen. If the delay timer is set for 0 seconds, the transfer LED should immediately go out. If the timer is set to anything but 0 seconds, reconnecting the short will start the timer and the transfer LED will flash until the timer has completed its cycle. If desired, the timer can be reset mid-cycle by pressing the manual transfer switch twice. This eliminates the need to wait for the entire cycle to finish.

4.6 TESTING THE BP-1A IN THE LOGIC MODE In this section, we will test the BP-1A in an installation where the mode switch has been set to the LOGIC position. This is the case where the PBX provides a normally high logic signal that changes to logic low when transfer is requested.

Initial Operation: At this stage, the BP-1A should be in the normal mode, with only the power LED lit. If the transfer LED is lit or flashing, determine whether or not this is a problem. There are three reasons for the transfer mode being enabled. The first reason is legitimate: the logic input has a logic low presented to it. This could be the case where a new PBX has not yet been brought up to its operating state and it is legitimately giving a command to transfer. The second reason is that the timer is active and the time interval has not completed. The transfer LED will be flashing when the timer is active. Reset the timer by pressing the manual transfer switch twice. The third reason is that the manual transfer switch is activated. Press it once to change its on/off state. After performing a review and making any required changes, the unit should be in the normal mode. Only the power LED should be lit.

Testing Transfer Operation: Momentarily disconnect the power source from the BP-1A. The power LED should go out, indicating that the unit is in the transfer mode. Again apply power. The power LED should light. If the delay timer has been selected, the transfer LED will flash until the delay time has completed. Disconnect the logic signal at the source of the signal, e.g. at the PBX. The transfer LED should light. The power LED will remain lit when the transfer LED is lit. Reconnect the logic signal and one of two things will happen. If the delay timer is set for 0 seconds, the transfer LED should immediately go out. If the timer is set to anything but 0 seconds, restoring the logic high signal will start the timer and the transfer LED will flash until the timer has completed its cycle. If desired, the timer can be reset mid-cycle by pressing the manual transfer switch twice. This eliminates the need to wait for the entire cycle to finish.

4.7 TESTING MULTIPLE BP-1As Use the following paragraphs to test a multiple BP-1A installation. Place all the BP-1As in the normal mode. Only the power LEDs should be lit. Press the manual transfer switch on the first BP-1A. The transfer LED on this unit should light. Again, press the manual transfer switch on the first unit. The transfer LED should stop lighting. Repeat this sequence for all the BP-1As. Now refer to the section appropriate for your installation.

NO Mode: Previously, the contact input on each of the BP-1As should have been connected together, and then connected to a normally open contact. Short the contact at the source of the contact, e.g., at the PBX. The transfer LED on each of the BP-1As should light and the power LEDs will remain lit. Remove the short and one of two things will happen. If the timers are set for 0 seconds, the transfer LEDs should immediately go out. If the delay timers are set to anything but 0 seconds, removing the short will start the timers operating and the transfer LEDs will flash. As each timer completes its cycle, its associated transfer LED will stop lighting. If desired, the timer can be reset in mid-cycle by pressing the manual transfer switch twice.

NC Mode: Previously, the contact input on all the BP-1As

should have been connected together, and then connected to a normally closed contact. Disconnect the closure at its source, e.g. at the PBX. The transfer LED on each of the BP-1As should light and the power LEDs will remain lit. Reconnect the closure and one of two things will happen. If the timer is set for 0 seconds, the transfer LEDs should immediately go out. If the timer is set to anything but 0, reconnecting the short will start the timers operating and the transfer LEDs will start flashing. As each timer completes its cycle, its associated transfer LED will stop lighting. If desired, the timer can be reset mid-cycle by pressing the manual transfer switch twice.

LOGIC Mode: Previously, the logic input on all the BP-1As should have been connected together, and then connected to a logic signal. Disconnect the logic signal at the source of the signal, e.g. at the PBX. The transfer LED on each of the BP-1As should light and the power LEDs will remain lit. Reconnect the logic signal and one of two things will happen. If the timer is set for 0 seconds, the transfer LEDs should immediately go out. If the timer is set to anything but 0 seconds, reconnecting logic high will start the timers operating and the transfer LEDs will start flashing. As each timer completes its cycle, its associated transfer LED will stop lighting. If desired, the timer can be reset mid-cycle by pressing the manual transfer switch twice. This eliminates the need to wait for the entire cycle to finish.

4.8 TESTING THE TELEPHONE LINES ASSOCIATED WITH THE BP-1A The one or more BP-1A units that have been installed should each be tested by following the procedure outlined in this section. Place the BP-1A in the normal mode. The power LED should be lit. The transfer LED should not be lit. Ensure that the trunks function correctly by using the PBX to draw CO dial tone from every trunk associated with a BP-1A circuit. Even if these trunks are of an incoming only type, such as WATS, you usually can still draw dial tone. Ensure that PBX dial tone can be drawn from each station telephone that is connected via a BP-1A circuit. Check that each station telephone is labeled with a "Power Failure Transfer Telephone" label.

Note: In some installations, the single line telephones will be dedicated for PFT use; no PBX extensions will be wired to the BP-1A. In this case, the single line telephones will not draw dial tone when the associated BP-1A is in the normal mode.

Use the manual transfer switch to place the BP-1A in the transfer mode. Both LEDs should be lit. Ensure that each station telephone can draw a dial tone from the CO. Even if these trunks are of an incoming only type, such as WATS, you usually can still draw dial tone. On each PFT station telephone that connects to a trunk with outgoing call capability: place a call and ensure that it completes correctly. On all PFT station telephones: receive an incoming call.

4.9 PLACING THE BP-1A INTO SERVICE The one or more BP-1As should now be ready for action! Normal operation should find the power LED lit, and the transfer LED not lit.

4.10 MAINTENANCE It is recommended that the BP-1A and associated station telephones be tested not less than once a year. Be certain that each PFT telephone is identified with a PFT telephone label. Moves and changes of PFT station telephones often cause the labeling to go astray. Replacement labels can be ordered from Gordon Kapes, Inc.

5. Circuit Description

5.1 GENERAL The circuit description is intended to familiarize you with the BP-1A for engineering and applications use.

5.2 POWERING The BP-1A automatically adjusts for 24Vac, -24Vdc, or -48Vdc operation. Power enters the unit and passes through a full wave rectifier circuit. For 24Vac operation, this converts the AC to DC. For DC operation, this acts as a polarity guard. An electrolytic capacitor provides filtering. The rectified and filtered power is fed to a 3-terminal regulator which limits the voltage to -24Vdc. The -24Vdc provides power for the transfer relays and the power LED. The -24Vdc is also fed to a 3-terminal regulator which provides -12Vdc for use by the logic circuitry and the auxiliary relay.

5.3 LOGIC CIRCUITRY The BP-1A uses CMOS integrated circuits for low power, reliable operation. An oscillator provides a low frequency clock signal for use by the timer circuitry. DIP switches program a divider circuit for the desired time interval. Robust integrated circuit relay drivers control the transfer and auxiliary relays.

5.4 TRANSFER CONTROL LINES The contact input is isolated from the nasty outside world via high impedance, TTL-type inputs. The logic input uses an optical coupler to maintain isolation from the device supplying the logic signal.

5.5 AUXILIARY RELAY CONTACT Auxiliary Relay Contact NO1 follows the operating mode of the BP-1A, changing state any time the BP-1A is in the transfer mode.

5.6 TERMINAL STRIP TS1 Two of the three terminals on terminal strip TS1 parallel contacts on plug P1. This is provided as an installer convenience. Terminal 1 is not used; terminals 2 and 3 allow connection of incoming AC or DC power.

6. Specifications

POWER REQUIREMENT

18 to 30Vac, 140mA maximum
Class 2 power transformer only, minimum 10VA rating
-22 to -56Vdc, 130mA maximum

TRANSFER VOLTAGE

Minimum voltage to go from normal mode to transfer mode:
8Vac, -10Vdc, approximate
Minimum voltage to go from transfer mode to normal mode:
10Vac, -18Vdc, approximate

NUMBER OF PFT CIRCUITS

8

TRUNK COMPATIBILITY

Loop start

RETURN TO NORMAL MODE DELAY TIMER

Time Interval: 0 to 15 minutes, selectable in 60-second increments
Accuracy: $\pm 10\%$ of selected time interval

AUXILIARY RELAY CONTACT NO1

Type: normally open (not shorted), break before make
Rating: 0.5A maximum at 60Vdc or 60Vac (resistive)

TRANSFER CONTROL INPUTS

Contact Input: the contact connected to the contact input must be capable of handling 1mA at -24Vdc; contact inputs on multiple BP-1A units can be bridged (connected in parallel)

Logic Input: transfer is enabled by applying a logic low to the logic input. Minimum logic current for logic high: 1mA. Input current is limited via an 1800 ohm resistor in series with the logic input's optical coupler. If sufficient logic current is available, logic inputs on multiple BP-1A units can be bridged (connected in parallel).

Operating Modes: switch selectable for normally open contact input, normally closed contact input, or normally high logic input

ENVIRONMENT

0 to 50 degrees C, humidity to 95% (no condensation)

SAFETY COMPLIANCE

Underwriters Laboratories Inc. Listed Telephone Equipment

FCC REGISTRATION

Registration Number: BVV8VH-60403-PX-N
Ringer Equivalence: 0.0B

RADIATED NOISE COMPLIANCE

Contains no circuitry subject to EMI regulations

RELIABILITY

MTBF 30.4 years, per Method 1 of Bellcore TS-TSY-000332, Issue 3, September 1990

INTERCONNECTIONS

The BP-1A contains two 25-pair plugs and one 3-position screw terminal strip. Installer must supply two 25-pair connectors (female).

DIMENSIONS

8.75 inches high (22.2cm)
8.75 inches wide (22.2cm)
3.25 inches deep (8.3cm)

WEIGHT

Approximately 2 pounds (0.9kg)

MOUNTING

Wall mounts with four #8 pan head screws

7. Incorrect Operation

7.1 REVIEW PRACTICE Should problems arise in the operation of the BP-1A, please review Section 3—Installation and Section 4—Testing and Operation of this practice.

7.2 INCORRECT MODE SELECTION If a logic source is not used, the mode switch must not be set to the LOGIC position. Leaving the BP-1A in the logic mode without a logic source will cause the unit to remain "locked" in the transfer mode. If the mode switch is set to the NC mode a closed (shorted) contact must be connected. Leaving the BP-1A in the NC mode without a shorted contact input will leave the unit locked in the transfer mode.

7.3 LOGIC INPUT The logic input is polarity sensitive! Correct operation requires that the logic signal's + and - connections are correctly connected.

7.4 RETURN TO NORMAL MODE DELAY TIMER This feature is wonderful but is rarely seen on PFT equipment. If you are

having trouble getting the BP-1A to respond to your wishes, start by disabling the delay timer. Simply place the four DIP switches to the OFF position and the delay timer is no longer active. This will allow the BP-1A to be tested without the timer's intervention. Then, to familiarize yourself with the timer, set the time interval for one minute. This will allow you to observe the timer in action without going crazy waiting for a long time interval to complete! Once you are comfortable with what is going on, reset the time to the desired interval. Remember that pressing the manual transfer switch twice will reset a timer cycle that is in process.

7.5 INCORRECT POWER CONNECTION Be sure that the power source is correctly connected to plug P1 or terminal strip TS1. As soon as power is applied, the power LED will light. If you're connecting power via the terminal strip, remember that terminal 1 is not used! Connect power to terminals 2 and 3.

7.6 APPLICATION LIMITATIONS The BP-1A was designed to operate correctly in most PFT applications. However, Gordon Kapes, Inc. does not guarantee the BP-1A to be compatible with all loop start trunk lines, PBXs, and station telephones. All functions of the installed BP-1A should be thoroughly tested before the unit is placed into service.

7.7 SAVE TIME You are encouraged to call Gordon Kapes, Inc. for technical support. We much prefer a telephone call BEFORE you tear your hair out! We do not mind "walking" you through an installation, or performing a verbal review prior to your actually getting started. Please have these items with you: a copy of this technical practice, PBX documentation, and adequate tools. In addition, it is very helpful to have a digital VOM, such as the wonderful Fluke 70 or 80 series, a line-person's handset, and some cross-connect wire. (For those rare cases, it's not a bad idea to have some aspirin and the telephone number of a pizza place that delivers!)

8. Repair and Replacement

8.1 NOT SO FAST Statistically, most equipment returned to Gordon Kapes, Inc. for repair actually has nothing wrong with it. A telephone call to Gordon Kapes, Inc. technical support can often help to get the equipment operating correctly. We don't mind spending time with our customers getting a site up and running.

8.2 SEND IT BACK If you determine that the BP-1A is defective, return for repair or replacement according to the Gordon Kapes, Inc. Warranty/Repair and Return policy.

8.3 ONLY WE FIX IT In the event repairs are ever needed on your BP-1A, they should only be performed by Gordon Kapes, Inc. or an authorized representative. For further information, contact Gordon Kapes, Inc.

9. United States FCC Notes

9.1 TYPE OF SERVICE Your BP-1A is designed to be used on standard device telephone lines. The BP-1A connects to the telephone line by means of standard jacks called USOC RJ21X. Connection to telephone company-provided coin service (central office implemented systems) is prohibited. Connection to party line service is subject to state tariffs. Connection to coin service party lines is not specified but could prove interesting.

9.2 TELEPHONE COMPANY PROCEDURES The goal of the telephone company is to provide you with the best service it

can, within the constraints of receiving a good return on shareholder equity. In order to do this, it may occasionally be necessary for them to make changes in their equipment, operations, or procedures. If these changes might affect your service or the operation of your equipment, the telephone company will give you notice, in writing, possibly in advance, to allow you to make any changes necessary to maintain uninterrupted service. If you have any questions about your telephone line, such as how many pieces of equipment you can connect to it, the telephone company will provide this information upon request.

In certain circumstances, it may be necessary for the telephone company to request information from you concerning the equipment which you have connected to your telephone line. Upon request of the telephone company, provide the FCC registration number and the ringer equivalence number (REN) of the equipment which is connected to your line; both of these items are listed on the equipment label. The sum of all of the RENs on your telephone line should be less than five in order to assure proper service from the telephone company. In some cases, a sum of five may not be usable on a given line.

9.3 IF PROBLEMS ARISE If any of your telephone equipment is not operating properly, you should immediately remove it from your telephone line, as it may cause harm to the telephone network. If the telephone company notes a problem, they may temporarily discontinue service. When practical, they will notify you in advance of this disconnection. If advance notice is not feasible, you will be notified as soon as possible. When you are notified, you will be given an opportunity to correct the problem and be informed of your right to file a complaint with the FCC. You have the right to remain silent, if you waive your right to remain silent...

10. Canadian DOC Notes

10.1 LABEL If present, the Canadian Department of Communications label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

10.2 PERMISSION Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

10.3 REPAIRS Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

10.4 PRACTICE SAFE TELEPHONY Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water

pipe system, if present, are connected together. This precaution may be particularly important in rural areas. Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

10.5 LOAD NUMBER The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the load numbers of all the devices does not exceed 100.

11. BP-1A Technical Notes

11.1 OVERVIEW Since 1982, the BP-1 family of products has been providing power failure transfer protection for thousands of PBX systems. With the release of the BP-1A, a major advance in performance has been achieved. Many improvements have been added, including a number of entirely new functions. The BP-1A obsoletes both the BP-1-24 and BP-1-48 units.

11.2 COMPATIBILITY The issue of compatibility was carefully addressed. The BP-1A is essentially pin-for-pin compatible with the both the BP-1-24 and BP-1-48. The following paragraphs provide a brief overview of the changes and improvements. If this is not sufficient, please contact Gordon Kapes, Inc. for additional information.

11.3 POWERING The original BP-1 units were manufactured in two versions: the BP-1-24 for use with 24Vac or -24Vdc power sources, the BP-1-48 for use with a -48Vdc power source. Only one version of the BP-1A is required as it will operate with 24Vac, -24Vdc, or -48Vdc. This flexibility makes the BP-1A truly universally powered. Note that the power requirement for 24Vac and -24Vdc operation has been significantly reduced, from 225mA maximum to 130mA maximum. The power requirement for -48Vdc operation remains the same; 140mA maximum.

11.4 RETURN TO NORMAL MODE DELAY TIMER The BP-1A adds a unique feature, providing a time delay between when power is restored (or a transfer control line returns to its normal state) and when the eight power failure transfer circuits return to the normal, non-PFT mode. The timer can be configured to ensure that sufficient time is allowed for a PBX to completely reset prior to the BP-1A leaving the transfer mode. The transfer LED has been implemented to display the status of the delay timer.

11.5 TRANSFER CONTROL LINES The BP-1A contains a revised transfer control line implementation. The unit can respond to normally closed, normally open, and a logic status signal. A mode select switch has been added to configure how the unit operates.

11.6 TERMINAL STRIP For installation simplicity, the number of terminals on the terminal strip has been reduced to just three, although the BP-1A uses just two of the three. All other connections are made via 25-pair plugs P1 and P2.

11.7 AUXILIARY RELAY CONTACT The BP-1A has been simplified, eliminating the often confusing NO2 contact. It caused more problems than it was worth—good-bye to it! Relay contact NO1 can be useful and remains.

11.8 IMPROVED SWITCHING RELAYS The BP-1A uses a new generation of subminiature relays. These relays offer lower power consumption, greater reliability, and are completely sealed from environmental contamination.

Specifications and information contained in this technical practice subject to change without notice.

© Gordon Kapes, Inc., March 10, 1992
all rights reserved
www.gkinc.com
support@gkinc.com

Figure 2 BP-1A Power Failure Transfer Unit Connection Diagram

P1 Pin			P2 Pin		
Number	Cable Color	Connection	Number	Cable Color	Connection
26	WHT-BLU	T EXT-1	26	WHT-BLU	T EXT-5
1	BLU-WHT	R	1	BLU-WHT	R
27	WHT-ORN	T STA-1	27	WHT-ORN	T STA-5
2	ORN-WHT	R	2	ORN-WHT	R
28	WHT-GRN	T TRK-1	28	WHT-GRN	T TRK-5
3	GRN-WHT	R	3	GRN-WHT	R
29	WHT-BRN	T COT-1	29	WHT-BRN	T COT-5
4	BRN-WHT	R	4	BRN-WHT	R
30	WHT-SLT	T EXT-2	30	WHT-SLT	T EXT-6
5	SLT-WHT	R	5	SLT-WHT	R
31	RED-BLU	T STA-2	31	RED-BLU	T STA-6
6	BLU-RED	R	6	BLU-RED	R
32	RED-ORN	T TRK-2	32	RED-ORN	T TRK-6
7	ORN-RED	R	7	ORN-RED	R
33	RED-GRN	T COT-2	33	RED-GRN	T COT-6
8	GRN-RED	R	8	GRN-RED	R
34	RED-BRN	T EXT-3	34	RED-BRN	T EXT-7
9	BRN-RED	R	9	BRN-RED	R
35	RED-SLT	T STA-3	35	RED-SLT	T STA-7
10	SLT-RED	R	10	SLT-RED	R
36	BLK-BLU	T TRK-3	36	BLK-BLU	T TRK-7
11	BLU-BLK	R	11	BLU-BLK	R
37	BLK-ORN	T COT-3	37	BLK-ORN	T COT-7
12	ORN-BLK	R	12	ORN-BLK	R
38	BLK-GRN	T EXT-4	38	BLK-GRN	T EXT-8
13	GRN-BLK	R	13	GRN-BLK	R
39	BLK-BRN	T STA-4	39	BLK-BRN	T STA-8
14	BRN-BLK	R	14	BRN-BLK	R
40	BLK-SLT	T TRK-4	40	BLK-SLT	T TRK-8
15	SLT-BLK	R	15	SLT-BLK	R
41	YEL-BLU	T COT-4	41	YEL-BLU	T COT-8
16	BLU-YEL	R	16	BLU-YEL	R
42	YEL-ORN		42	YEL-ORN	
17	ORN-YEL		17	ORN-YEL	
43	YEL-GRN		43	YEL-GRN	
18	GRN-YEL		18	GRN-YEL	
44	YEL-BRN		44	YEL-BRN	
19	BRN-YEL		19	BRN-YEL	
45	YEL-SLT		45	YEL-SLT	
20	SLT-YEL		20	SLT-YEL	
46	VIO-BLU	+ Logic Input	46	VIO-BLU	
21	BLU-VIO	- Logic Input	21	BLU-VIO	
47	VIO-ORN		47	VIO-ORN	
22	ORN-VIO		22	ORN-VIO	
48	VIO-GRN	Contact Input	48	VIO-GRN	
23	GRN-VIO	Contact Input	23	GRN-VIO	
49	VIO-BRN	+ See Note 1	49	VIO-BRN	
24	BRN-VIO	+ See Note 1	24	BRN-VIO	
50	VIO-SLT	- See Note 1	50	VIO-SLT	NO1
25	SLT-VIO	- See Note 1	25	SLT-VIO	NO1

Terminal Strip TS1

1	2	3
Not Used	See Note 2	

Note 1

P1 Pin Number	Cable Color	BP-1A w/24Vac Operation	BP-1A w/-24Vdc Operation	BP-1A w/-48Vdc Operation
49	VIO-BRN	AC Common	GND (pwr sup)	GND (pwr sup)
24	BRN-VIO	AC Common	GND (pwr sup)	GND (pwr sup)
50	VIO-SLT	±24Vac	-24Vdc	-48Vdc
25	SLT-VIO	±24Vac	-24Vdc	-48Vdc

Note 2

TS1 Terminal Number	BP-1A w/24Vac Operation	BP-1A w/-24Vdc Operation	BP-1A w/-48Vdc Operation
2	AC Common	GND (pwr sup)	GND (pwr sup)
3	±24Vac	-24Vdc	-48Vdc

Note 3

EXT: Tip and Ring from PBX extension port
 STA: Tip and Ring to station telephone
 TRK: Tip and Ring to PBX trunk port
 COT: Tip and Ring from Central Office (CO)

Note 4

NO Contact Input: Close (short) to place BP-1A in transfer mode.
 NC Contact Input: Open to place BP-1A in transfer mode.
 Logic Input: Remove (1mA minimum) logic signal to activate transfer.

Note 5

NO1: Normally open (not shorted) auxiliary relay contact. Closes (shorts) when any transfer mode occurs.

© Gordon Kapes, Inc., March 10, 1992
 all rights reserved
 www.gkinc.com
 support@gkinc.com